

PC PREMIUM

Salt Water Management System

User Manual



www.reltech.com.au

IMPORTANT INSTRUCTIONS

Please keep this Manual safe and take time to read it.

***If the power cord is damaged the unit must be returned to
manufacturer or its Service Agent for repair.***

This Manual contains a Quick-Learn Index on Page 2. This Index contains common questions a user might ask when maintaining a pool and using the PC Premium. This will allow the user to begin operating the PC Premium easily. You only learn what you need to know! It is however a worthwhile read. If you lose this manual you'll be sorry !!!

Page	Content
1	This Index obviously....the Quick-Learn Index is on the next page.....
2	Quick-Learn Index – there is no time to waste.....
3	What's in the box ? (ie The packing list)
3	Installation Instructions – let's hope the builder/installer got it right !
4	The PC Premium Power Supply
4	The PC Premium Cell
4	The (optional) Pool Light Outlet
4	The (optional) Acid Feed Valve or Pump
5	Installation Diagram 1: General
6	Installation Diagram 3: Heaters with Acid Dosing
7	Installation Diagram 4: Heaters with Acid Dosing (variation)
8	Installation Diagram 2: Systems Below Water Level
8	How the PC Premium works.....
9	Before you start the unit.....
10	PC Premium Display and Control Overview –which buttons do I push.....
11	The LCD display – Operating Information, Warnings & Shutdowns
12	PC Premium Display and Control – you've pushed buttons, now find out why....
12	Operation – Automatic & Manual
12	Gas Detection & Pump Shutdown
12	Power Failure & Timer Overview
13	Timer Operation Overview
14	AutoMode & Full Manual Mode (FMM) – more Timer details.....
17	The MENU System – Access & Operation
17	MENU Overview & Access
19	TIMER MENU – access the timer (planner on page 21)
22	TEMPERATURE – compensating for cold water
23	LIGHT MENU – automatic Pool Light Control (optional 240Vac outlet/s)
24	+ACID MENU – acid dosing system (optional)
26	Pool Chemistry for PC Premium – Salinity, Stabiliser, pH, Total Alkalinity, etc.....
28	Running Times, Output Control, Superchlorination.....
29	Pool Balance
31	Some Pool Additive Information
32	Maintenance – not really a dirty word !
	The PC Premium Power Supply and optional Acid Feed System
	The PC Premium Cell
33	Cleaning the Cell – if you ever need to.....
33	What to Avoid Putting in the Pool
34	Trouble Shooting – if you ever have a problem.....
35	Warranty

PC Premium Quick-Learn Index

The following detailed instructions can be accessed by “Question & Answer” to aid in the quick understanding of the PC Premium. Many of the questions below will require the use of a MENU – to access the MENU system see page 18 (or just press the ENT-pad – it is easy to work out !).

What can I read quickly to get me started ? pages 8 to 11

Time and Automatic (or Manual) Operation:

- 1 How do I set the time ? page 20
- 2 How does the Timer work ? page 13
- 3 How many Filter Cycles do I need ? page 13
- 4 How do I turn the pump ON (or OFF) when it is in AutoMode ? page 15
- 5 Are there any DEFAULT ON/OFF timer settings I can select ? YES, see page 19
- 6 How do I adjust the automatic ON & OFF times ? see page 13, then pages 20 & 21
- 7 What happens if the unit is OFF and I turn it ON manually ? pages 15 & 16
- 8 What happens if the unit is ON and I turn it OFF manually ? pages 15 & 16
- 9 Can I run the unit for a period of time and have it turn OFF after ? YES: pages 15 & 16
- 10 Can I superchlorinate with the PC Premium ? YES – page 15 & 16
- 11 How do I stop an automatic ON (without turning the power off !) ? page 16
- 12 Can I use an external timer ? YES – page 13
- 13 Will I lose all the saved information if the power fails ? NO – page 12

The Chlorinator Cell:

- 1 How do I adjust the chlorine output of the Cell ? page 10
- 2 Why does the Cell keep turning ON/OFF ? page 28 “PC Premium Output Control”
- 3 The water is cold due to the time of season and the Low Conductivity Alarm is on – what can I do to adjust the unit for this ? page 22

The Optional Pool Light Power Outlet/s (240Vac):

- 1 How do I turn the Light ON and OFF manually ? page 10 & 23
- 2 Can I turn the Light ON & OFF automatically ? YES – page 23 & 10
- 3 Can I pulse an LED Light ? YES – page 23

The Acid Dosing System (optional):

- 1 How does the Acid Dosing System work ? page 24
- 2 How do I adjust (or turn OFF) the amount of acid that is being added to the pool ? pages 24 & 25
- 3 Can I add a large dose of acid manually ? YES – page 25

Maintaining a Swimming Pool:

- 1 What does my PC Premium need to function ? pages 9 & 26 – 28
- 2 What chemical levels do I need to check for my pool ? pages 26 – 29
- 3 What do I do if it all goes wrong ? page 34

What's In The Box ?

PC Premium Power Supply
PC Premium Cell + Housing + 40/50 Bushes Manual
Mounting Hardware

Optional:

Acid Feed Valve OR Pump
Acid Injection Fitting
Acid Tubing
Drum Fitting/Filter
NRV

Installation Instructions

General Information

The PC Premium is manufactured from weather resistant materials and is designed for operation in full sun and rain. However, all equipment will benefit from protection from both the sun and weather in that it will maintain its new appearance for a much longer period. The PC Premium Power Supply needs to be in a well ventilated area as it is air-cooled. Installing the unit in a hot and closed shed or box may lead to overheating and the operation of the internal protective thermal cut-out.

Note that insect intrusion (particularly ants) can cause problems with all equipment – the owner should ensure that the pool equipment area is maintained as free of insects as possible. Insect intrusion is not covered under the warranty.

When installing a PC Premium unit in conjunction with a Heatpump or Gas Heater there are special considerations to stop acid corrosion of the heat exchanger – please refer to Installation Diagram 3 on page 6 detailing the use of a venturi injector to produce a vacuum for valve operation. An alternative to a venturi is to use a peristaltic pump – see Installation Diagram 4 on page 7.

If the PC Premium unit is to be installed below water level please refer to Installation Diagram 2 on page 8. Note that the use of a peristaltic pump may also apply – see Installation Diagram 4 on page 7.

For most installations please refer to Installation Diagram 1 on page 5.

Installing the PC Premium Power Supply (Controller)

Choose a location for the PC Premium Power Supply close enough to the Cell/Housing and filtration pump so that both may be connected/disconnected easily. The PC Premium Power Supply should not be mounted in areas where chemicals are stored (eg acid and chlorine) as vapours from these chemicals are corrosive and may damage the electronic controls within the unit. Also ensure that the PC Premium Power Supply can be connected to the mains power outlet of the pool area. Note that this outlet must meet the current applicable Australian Standard at the time of installation.

The PC Premium Power Supply should be mounted vertically at least 1.5m above the ground and be at least 3 metres from the pool water. See the Quick Installation Guide provided.

A mounting template has been provided with this unit and is generally used when mounting the unit to a masonry wall.

The PUMP socket outlet in the base of the PC Premium Power Supply is dedicated to the filtration pump only. Do not use a double adaptor to connect another pump as this will overload the system and void warranty.

Installing/Connecting the PC Premium Cell


The Cell/Housing assembly should be plumbed into the pool return line after all other accessories (and prior to any heating take-offs). Note any water flow direction on the Cell/Housing. Remember that the Cell will need to be removed from the Housing periodically for cleaning – do not place it where its removal can be difficult/obstructed.

The Cell Cable is connected to the Cell Connector under the PC Premium Power Supply Cover. Ensure that the 3 connections (2 for Cell Power and 1 for Gas Sensing) are colour matched and not loose. An unmatched connection is likely to damage the Cell and a loose connection is likely to cause arcing which may damage the entire system.

Pool Light Outlets: units with light power outlets (240Vac mains sockets) can be used to run up to two 150W pool light power supplies (depending on unit).

Acid Dosing (optional): units with an Acid Dosing System (ADS) have an Injection Fitting and Feed Valve/Pump which must be installed. The chemical drum/s should be mounted away from the pool equipment to avoid possible corrosion problems. The Feed Valve/Pump should be mounted on a wall or post close enough to allow connection to the PC Premium Power Supply (connector under unit). ***Note that the use of either a Valve or Pump will change the way the system can be installed – see all diagrams before installation.***

Note that there are special requirements for some installations, see all Installations Diagrams. The feed tube, NRV and In-line Filter are then attached as shown in the diagrams.

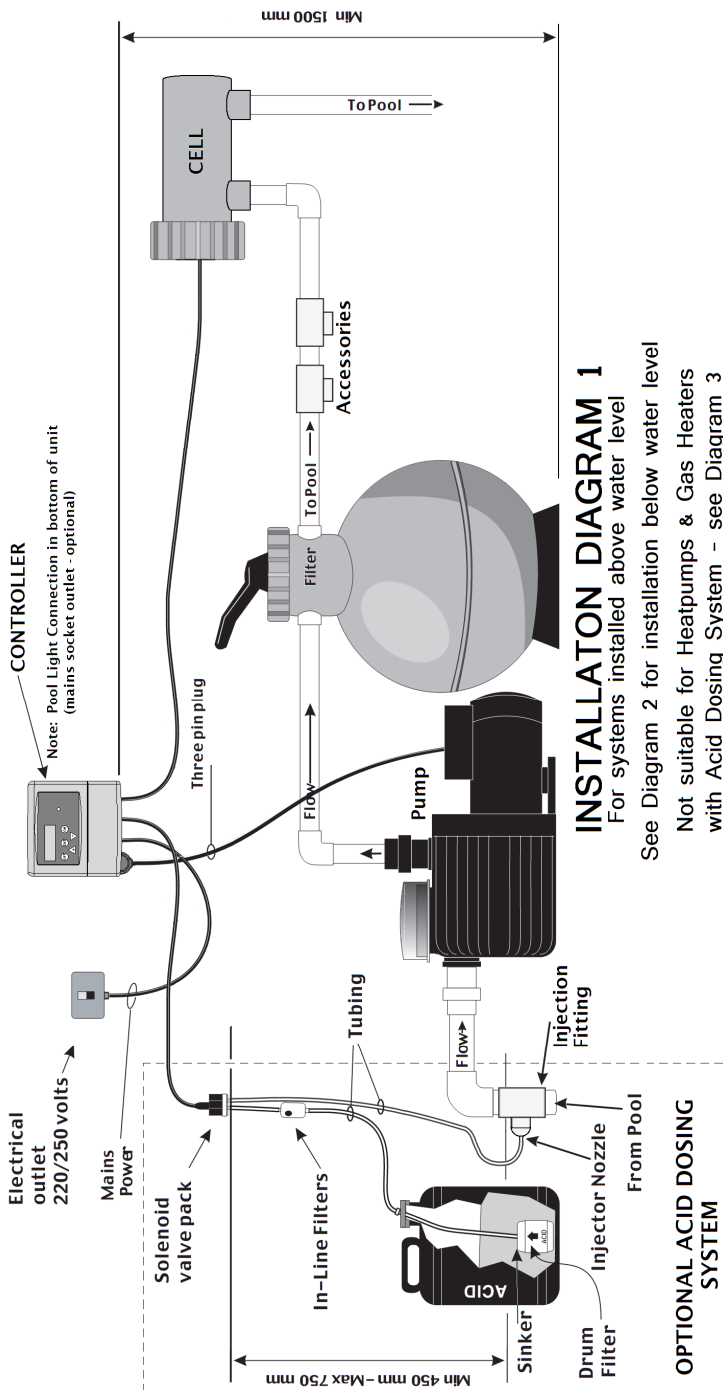


INSTALLATION DIAGRAM 1

For systems installed above water level

See Diagram 2 for installation below water level


Not suitable for Heatpumps & Gas Heaters
with Acid Dosing System - see Diagram 3

OPTIONAL ACID DOSING SYSTEM

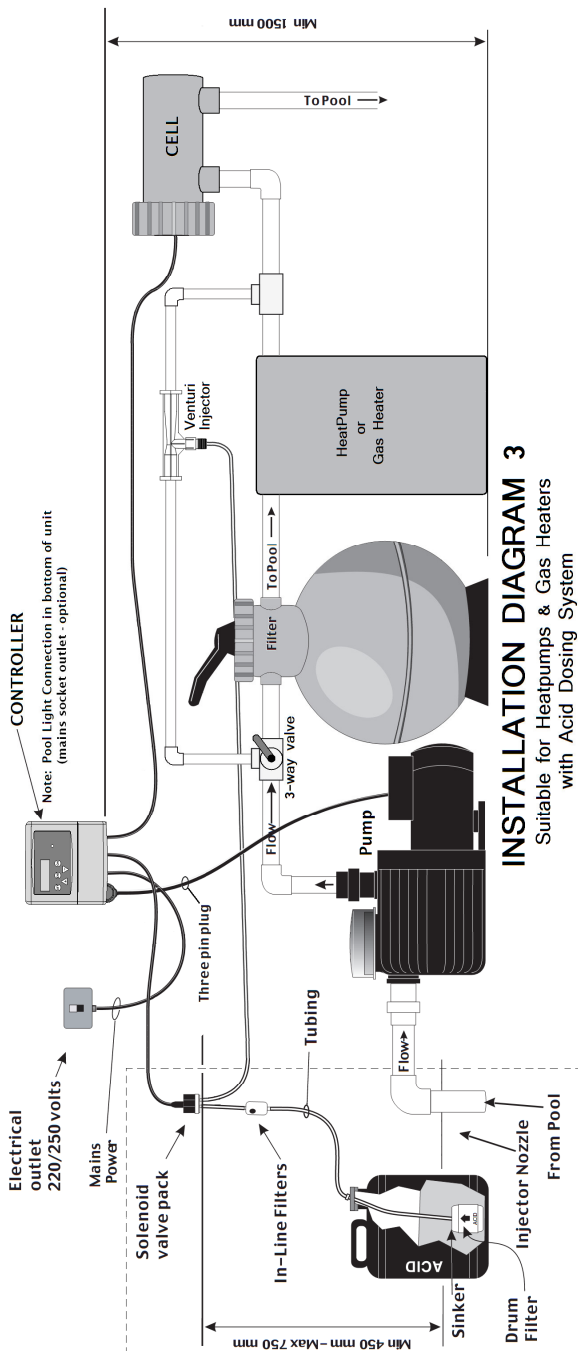


INSTALLATION DIAGRAM 3

Suitable for Heatpumps & Gas Heaters
with Acid Dosing System

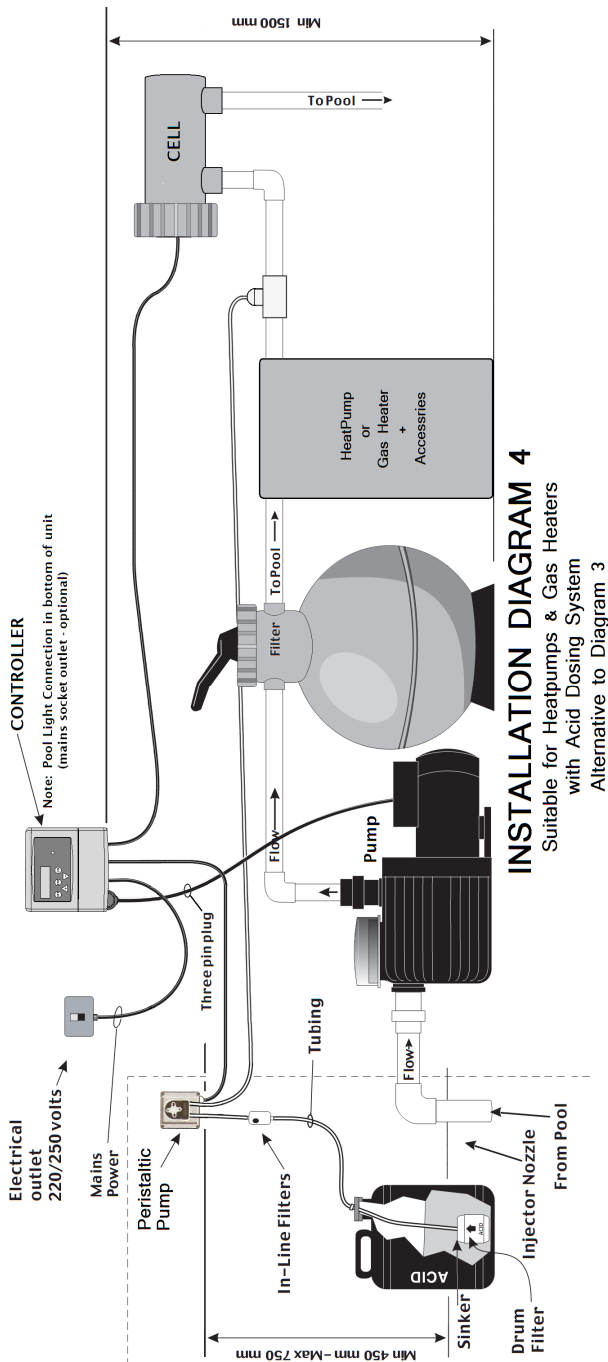

NOTE: FILTER NOT SHOWN

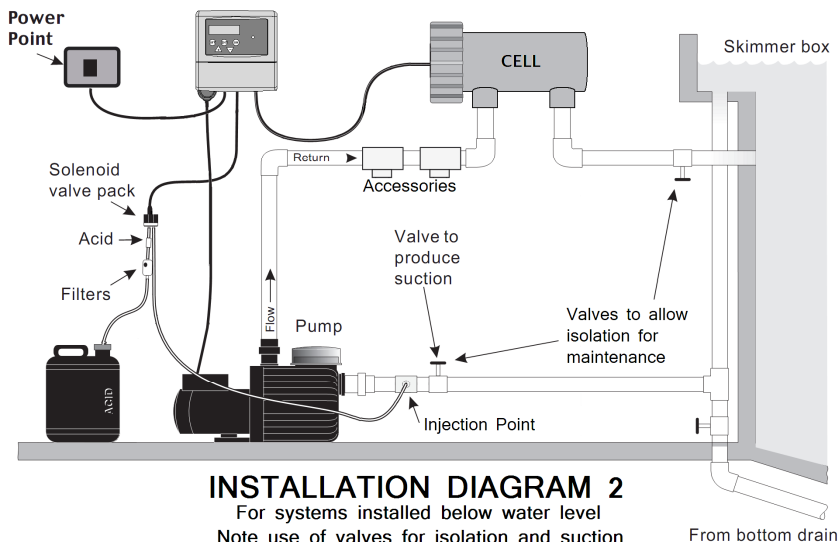

INSTALLATION DIAGRAM 2

For systems installed below water level

Note use of valves for isolation and suction

Not suitable for Heatpumps & Gas Heaters
with Acid Dosing System – see Diagram 3

How the PC Premium Works:

A salt chlorinator works by putting a dc current through an electrolytic Cell in a flow of salted water. The result is chlorine gas which dissolves almost instantly to form free chlorine in the water, and hydrogen gas which travels to the pool and bubbles off quickly.

The PC Premium constantly adds a dose of chlorine to the water over the operating period of the system. The total time of operation and hence the amount of chlorine added to the pool are governed by the number and length of Filter Cycles (determined by the timer running the system). For Filter Cycle information see the Timer information in this manual.

Generally a salt water pool is run for around 8 – 10 hours per day in summer and 2 – 4 hours per day in winter. The summer operating periods are usually in the early morning and later evening. This allows a chlorine residual to build up for pool use during the day. The filter system should always be running when the pool is being used.

When chlorine is added to water the pH always changes – this is because chlorine is not a neutral chemical. For a salt water system the pH will slowly rise as chlorine is produced. Gas chlorine, trichlor & dichlor all reduce pH, while liquid chlorine and calcium hypochlorite (granular) will raise the pH. Please review the information under Pool Balance on page 29.

Always read the instructions and warnings on chemical containers before using chemicals!

Before You Start the Unit – Check the Following:

Before you begin using the PC Premium make sure the following items are correct:


- 1 **SALT** – there must be at least 3000ppm of salt in the pool. This is achieved by adding 4kg of salt for every 1000 litres (1m³) of pool volume. This amount of salt will take time to dissolve. The process can be hastened by using the pool vacuum attachment to collect the salt. By leaving the vacuum in the deep end of the pool the salted water will circulate and mix within a couple of hours. **Keep salt below 7500ppm to avoid shutdown.**
- 2 **CHLORINE** – if it is a new installation add enough chlorine (liquid or granular) to achieve a reading of 3ppm on an appropriate test kit. It may also be possible to run the system for at least 24 hours to build up a residual.
- 3 **STABILISER** – it is vital that stabiliser (also known as cyanurate and cyanuric acid) be added and maintained at 30ppm to 50ppm. This compound reduces chlorine destruction due to sunlight. Caution: too much stabiliser will reduce the effectiveness of chlorine and can result in poor quality water. Never exceed 80ppm. See page 29.
- 4 **pH** – for chlorine to be effective the pH must be within a certain range. This is usually between 6.8 (fibreglass/liner pools) or 7.2 (concrete/plaster) and 7.8. Check with the pool builder or your poolshop. Adjust pH down with acid – powder, liquid sulphuric or liquid hydrochloric. Be very careful with acid as it can be harmful and corrosive.

The above parameters are needed to get the pool started – please read the information on Pool Balance on page 29 for more information. **When the PC Premium is first powered it will “wake up” with 2 Filter Cycles enabled and the Clock will be set to 10:59am. Press the ON-pad on the front panel to start the filtration pump, then continue reading this manual (page 20) to find out how to set the current time.**

PC Premium Display and Control – a Quick Overview


The PC Premium uses an LCD display to provide the user with information. It has a simple “cross” style of control with 5 press-pads to allow the user to control the various functions that are available. The pads are backlit to show which are active at any given time. There is also a STATUS indicator that simply shows green (OK) and red (WARNING). The reason for any WARNING will be written on the LCD display.

Control of the way the PC Premium operates is achieved by the use of MENUS. The MENUS are accessed by simply pressing ENT(ER) pad. The first to be displayed is the TIMER MENU, with other MENUS accessed by using the UP/DOWN pads. To activate a MENU simply press ENT(ER) again. *If at any time you are unsure of what to do simply do not do anything and the unit will go back to its normal operation after a short delay of around 20 seconds.*

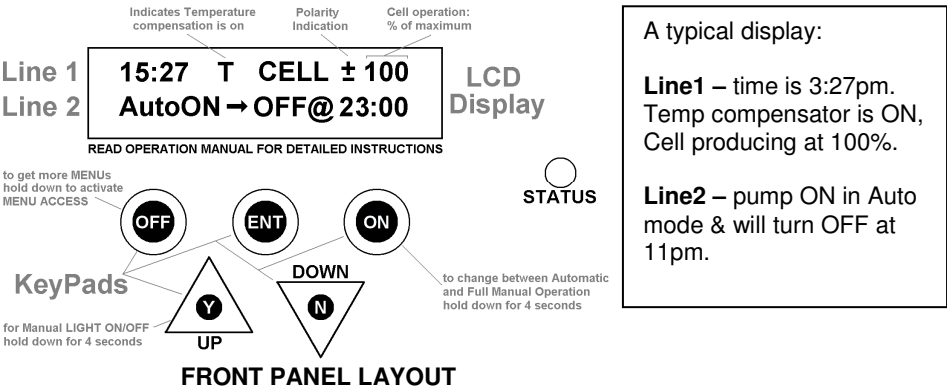

UP/YES & DOWN/NO Pads – these pads are used to navigate through the MENUS and answer YES/NO to questions on the display. If held down for 3 seconds it will manually turn ON/OFF the LIGHT (if unit has a light supply). A short press will change the PC Premium output by $\pm 10\%$ (during normal operation). **ENTER Pad** – this pad allows access to the MENUS for operation of the unit. In conjunction with the 2 pads above it allows changes to the way the unit operates (eg changing the ON/OFF times for Auto Mode). **ON & OFF Pads** – these pads allow instant changes to the unit operation. Example: if the unit is currently in AutoOFF the pump can be started simply by an ON-press once.

 Quick Output Adjustment:




In normal operation a press of the UP/DOWN-pads will change the PC Premium output by $\pm 10\%$. Note that for LED Lights requiring a power pulse to change effects you will be prompted after turning the Light ON manually. An UP-press will pulse the light.

The operation of this unit is very simple – please take the time to understand how it works as it can help make pool ownership the pleasure it can truly be.

The LCD display – Operational Information, Warnings & Shutdowns

Note: this section describes information displayed on the LCD during normal operation. For control function displays see the information on following pages.


Normal Operation – No Warnings or Shutdowns:

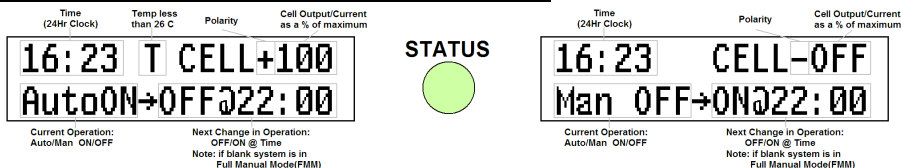

The diagram above is a sample of possible displays.


Normal Operation – With Warnings and/or Shutdowns

Gas Detection & Dry-Run Pump Shutdown:

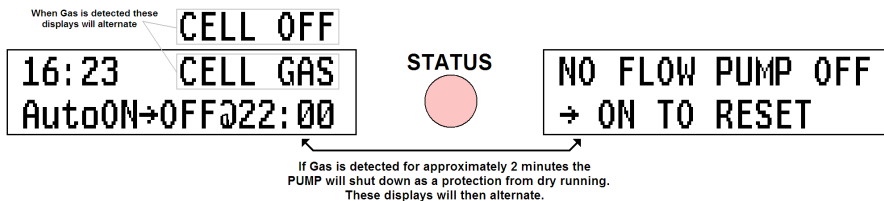


The first display above shows the Cell being turned OFF after Gas is detected for approximately 10 seconds. If Gas is still detected after approximately 2 minutes the Pump will also be turned OFF. To re-start the Pump simply press the ON-pad (as instructed by the display). This will reset the warnings and allow the Pump to run (for a maximum of 3 minutes if Gas is still detected).

Low Conductivity & (optional) Cell LoCond Shutdown:

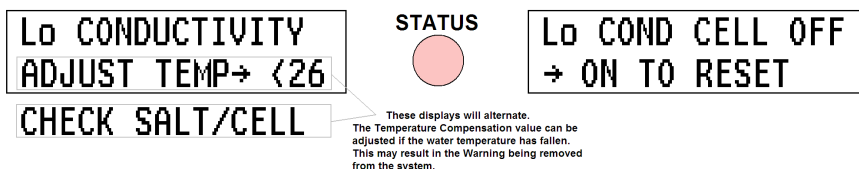

There are 2 levels of Low Conductivity detected. The first level results in the first display. The second level results in the Cell being turned OFF (if that option is selected at the factory). To start the Cell again simply press the ON-pad (as instructed by the display).

 High Conductivity: (note that this will turn the unit off to stop overheating)



If the above Warning is present the unit has shut down to avoid an overload (mandated by electrical standards). Check the salinity and water temperature. Salinity should be kept below 7,500ppm. The PC Premium is not designed for operation in seawater or brine.

Operation – Automatic & Manual

Gas Detection & Pump Shutdown

The PC Premium unit will detect a NO FLOW (water) condition by checking for gas in the Cell Housing. When gas has been detected for more than 10 seconds the Cell will be turned OFF. If gas is detected for a further 2 minutes (approx) the Pump will also be turned OFF. The STATUS light will be red to warn of a problem – see page 11.


Power Failure Operation & Timer Overview

The PC Premium unit comes with a timer function built into the operating software. The timer is a 24-hour type with quartz-crystal control and has a battery back-up in case of a power failure. The battery is a rechargeable NiMH type so it will never need replacing. If a power failure is of a short duration (a few hours) the PC Premium will keep time and maintain AutoMode functions. If a Filter Cycle is active when power is returned the pump will be turned ON.

If a power failure occurs over an extended period of time the PC Premium will save all its operating information to a special memory. When power eventually returns it will wake up remembering everything except the current time – it will show the time at which the Back-Up Power was exhausted. If the unit is in AutoMode the pump will be OFF waiting for the next Filter Cycle to become active. If the unit is in Full Manual Mode the pump will be turned ON immediately.

For future reference information that is retained in the special memory can not be lost and is said to be *non-volatile*. Information that can be lost during an extended power failure is said to be *volatile*.


Power Fail Operation is shown in the following diagram:

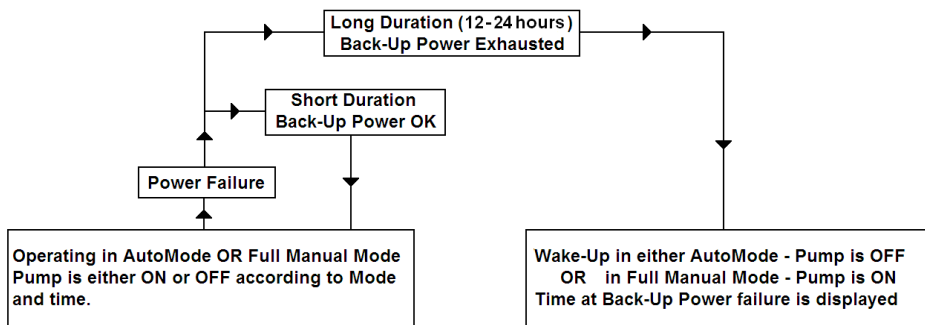

The PC Premium can operate automatically or manually in AutoMode, or it can be set to operate in Full Manual Mode (FMM). Both modes are non-volatile – a unit will always wake up in the mode to which it is set. Modes can be changed by the user however it is unlikely that this will be required – nearly all units (in Australia) will use the built-in timer.

Selecting Full Manual Mode (FMM) or AutoMode

Most units will already be set for AutoMode operation. To change from one mode to the other: press the ON-pad for 4 seconds

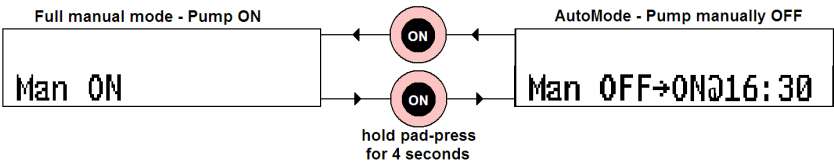


ON & OFF Times for AutoMode

The automatic operation of the PC Premium uses 4 ON/OFF times each of which make up a Filter Cycle (FC). Each FC has a start time (ON) and a stop time (OFF) and a number of 1 to 4 so the user can select how many operate. If 3 FCs are enabled then FC1, FC2 & FC3 will determine the PC Premium automatic operation. If only 1 FC is enabled then only FC1 be used.

If an FC has an ON time the same as another FC's OFF time then they can combine to form one longer FC.

This method of automatic operation is useful for increasing/decreasing the filtration hours of a pool as the seasons change – with no need to actually change the individual ON/OFF times. It is far simpler to enable/disable Filter Cycles. See page 20.

The PC Premium comes with preset FCs (4 are enabled for a total of 8 hours per day operation). These are shown in the diagram below along with possible uses. Please note that pool chlorine demand varies significantly and these settings are a guide only.

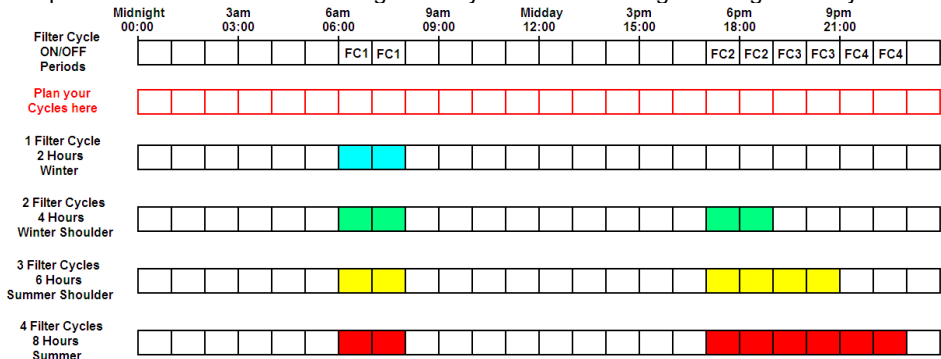


The Filter Cycle ON & OFF times are fully adjustable – please see page 21. **The diagram above can be used to help plan alternative Filter Cycle timing to suit your pool. Another planner on page 21.**

AutoMode and Full Manual Mode

Full Manual Mode (FMM)

FMM is used in situations where an external timer is required to run the PC Premium. FMM is a setting which starts the pump immediately on the application of power to the unit. A unit in FMM mode can have the pump turned OFF. This will mean that the pump will not turn back ON unless it is manually turned ON by the ON pad or a long power failure occurs.

The operation of the ON/OFF-pads in Full Manual Mode is shown below:
(Note: for clarity only Line2 of the LCD is shown)

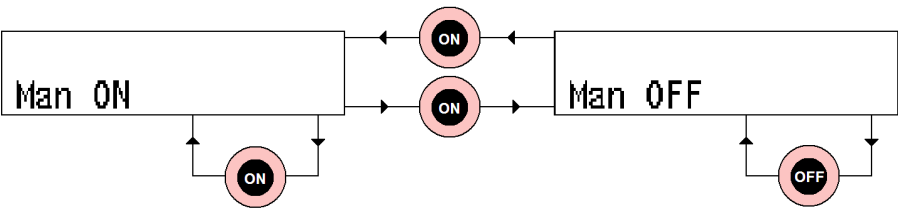


AutoMode

The Timer in the PC Premium is very versatile and easy to use. It has 4 adjustable Filter Cycles that can be accessed from the TIMER MENU. All Filter Cycles can be overridden manually. Filter Cycle 1 is always enabled. The other 3 Filter Cycles can be enabled or disabled in order (ie select 1, 2, 3 or 4 Filter Cycles to be enabled). This allows a simple increase or decrease in running times to be achieved without adjusting the Filter Cycle ON/OFF times – simply add or remove cycles ! See page 20 for details.

In AutoMode the PC Premium will START (at first power-up or after a long power failure) with the pump OFF. It will then wait for the next available ON-time to start the pump and the rest of the system. If there is a power failure the system will continue to keep time for a number of days. During this time the pump ON/OFF-times will still be checked. When power is restored the system will wake up and turn the pump ON if it is during a Filter Cycle.

Automatic Operation:

 During Automatic Operation Line2 of the LCD will display whether the Pump is ON or OFF and the next OFF or ON time:




The displays are read as: “Auto OFF next ON at 4:30pm” OR “Auto ON next OFF at 10pm”

Manual Operation While In AutoMode:

It is often necessary to turn the pump ON/OFF Manually when it is in AutoOFF/ON. This is a very simple operation – press the ON/OFF pad once. The pump will start or stop immediately.

The unit will still be in AutoMode and will respond to the next AutoOFF/ON – it will not remain ON/OFF indefinitely (unless that is desired see page 16).

The following diagram shows what will happen to Line2 of the LCD for a Manual ON/OFF during Auto OFF/ON and Manual OFF/ON:

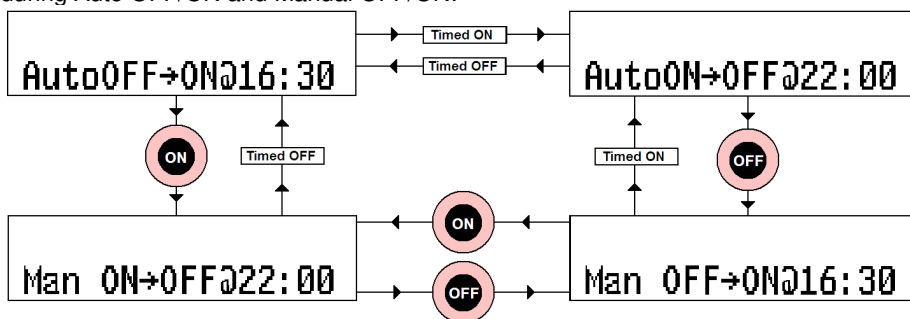

Operate Pump Manually For a Number of Hours:

It is sometimes desirable to run the pump for a period of time and then turn it OFF while still in AutoMode. The pump will then turn back on at the next AutoON. This feature can be used to superchlorinate over a 24, 36 or 48 hour period, or simply to run the pump for a couple of hours while the children have a swim.


To achieve this the unit should be in AutoON or ManON – simply press the ON-pad and Line2 of the LCD will read “Man ON FOR 01Hrs”. Another press of the ON-pad (without release) increases the number of hours that the pump will operate in the following sequence: 1, 2, 3, 4, 5, 6, 12, 18, 24, 36 & 48 and then the sequence repeats from 1 again. To lock in the selected number of hours the ENTER-pad must be pressed. If this is not done the PC Premium will revert to AutoMode (ManON→AutoOFF) operation in approximately 10 seconds.

When in this mode of operation the time period can be changed by simply pressing the ON-pad and repeating the above steps.

This mode can be stopped by simply pressing the OFF-pad – this will return the unit to ManOFF→AutoON.


It should be noted that the LCD will count down the time left to run in this mode. When it gets to 1 hour it will then count down the remaining minutes prior to the pump being turned off and the unit reverting to AutoOFF→AutoON.

The following diagram shows Line2 of the LCD as the various pads are pressed:

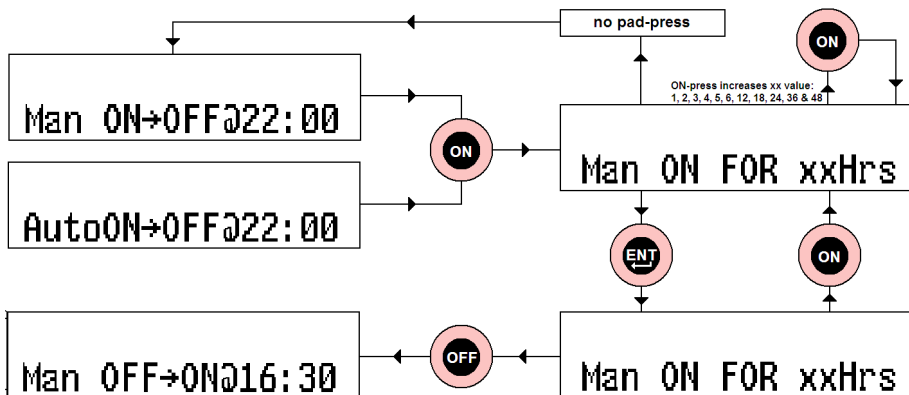

Turn Pump OFF with No AutoON (Pump OFF indefinitely):

If the pump is required to be OFF indefinitely (perhaps while work is being carried out on pool equipment) simply press the OFF-pad 1 or 2 times until the LCD reads “Man OFF→NO Auto”:

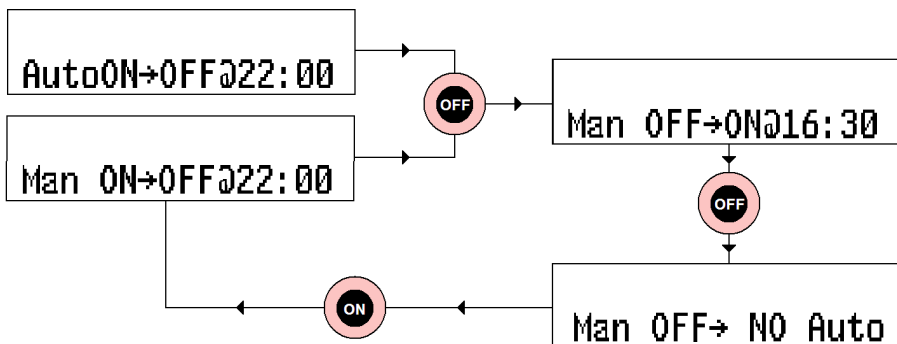


Note that if a long duration power failure occurs this setting is volatile – the PC Premium will wake in AutoOFF→AutoON.

The MENUs: Access & Operation

MENU Overview & Access


The First Time:

The MENU system is a simple way of allowing easy access to the many functions available in the PC Premium. For the purpose of keeping installation as simple as possible only two functions of the TIMER MENU are available when you first operate the PC Premium: SET TIME and ADJUST CYCLES.

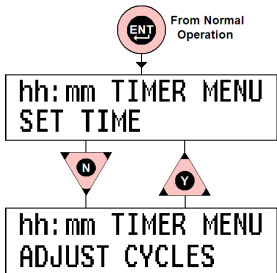

The SET TIMER and ADJUST CYCLES **MENUs** are accessed by pressing the ENT(ER)-pad, with the UP/DOWN-pads used to move from MENU to MENU. When the desired MENU is in the display press ENTER to use the MENU.
For more detailed information on these MENUs please see the TIMER MENU section.

Accessing the Other MENUs:

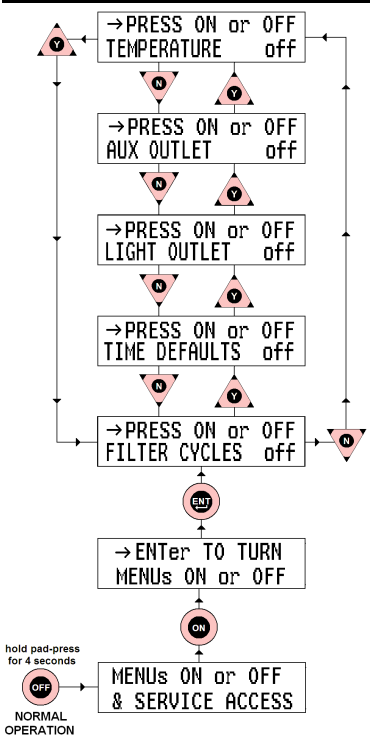

As stated previously the PC Premium comes with only two enabled MENUs (SET TIME and ADJUST CYCLES). The other MENUs within the PC Premium have to be Enabled (turned ON) before they can be used. This is achieved by the MENU ACCESS system. To get into the MENU ACCESS system press the OFF-pad for 4 seconds, press the ON-pad and then ENTER. Please review the diagram to the left.

The first MENU shown is FILTER CYCLES. This allows for up to 4 Filter Cycles to be active and is **very useful for seasonal timer adjustments** (see the TIMER section for more details). An ON- or OFF-press Enable / Disable the MENU.

Further UP/DOWN-presses will move to other MENUs which can be Enabled/Disabled.


TIME DEFAULTS allows very fast programming of the timer for 4 FILTER CYCLES and is **very useful for seasonal timer adjustments** (see the TIMER section for more details).

LIGHT OUTLET allows automatic light operation.

AUX OUTLET – empty: this is for future use.

TEMPERATURE compensates for cold water.

When All MENUs Are Enabled:

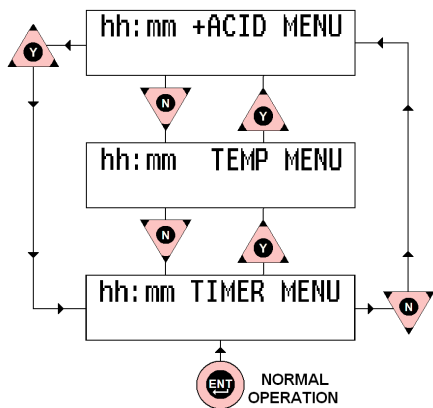


The PC Premium has 3 MAIN MENUs (shown in the diagram at left) and each MAIN MENU may have SUB-MENUs (described in the following pages). The MAIN MENUs are accessed from normal operation by a single ENT-pad press. The first MENU to be displayed is the TIMER MENU. Other MENUs are available by pressing the UP/DOWN-pads. Once the desired MENU is displayed a ENT-pad press will enter that MENU. If the ENT-pad is not pressed the PC Premium will go back to normal operation without any changes being made (after approx 20 seconds).
NOTE: the +ACID MENU is optional and is activated by the connection of an Acid Valve.

The TIMER MENU

Accessing the TIMER MENU:

The TIMER MENU is accessed by a ENT(ER)-pad press from the MAIN MENU. Once the TIMER MENU is accessed the first Sub-MENU appears in Line2 – SET TIME. There are 4 Sub-MENUs: SET TIME, FILTER CYCLES, ADJUST CYCLES & TIMER DEFAULTS. These Sub-MENUs are accessed by the UP/DOWN-pads and entered by pressing the ENT-pad.

The following diagram shows how to access the Sub-MENUs:

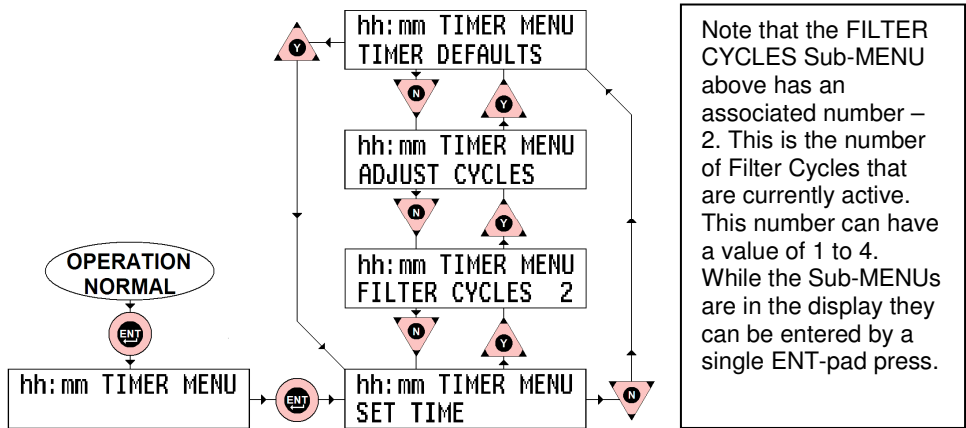

The TIMER DEFAULTS Sub-MENU:

The initial TIMER DEFAULT (TD) loaded is TD1. This runs from 6-8am and 5-11pm using FC1 thru FC4 and is shown on Page 13. There are a number of other TDs selectable using the UP/DOWN-pads from a display that looks like this:

DEFAULT 2 8Hrs
6 - 10am 6 - 10pm


Simply press the ENT-pad to select the DEFAULT that you require and the unit will configure these times using FC1 thru FC4. These times can be adjusted if desired, see page 21. Check your PC Premium for available TD times or simply make up your own !

Available Timer Defaults:

Def No.	Total Time	Run Times	Def No.	Total Time	Run Times
1	8 hrs	6-8am 5-11pm (factory)	6	10hrs	6-11am 6-11pm
2	8 hrs	6-10am 6-10pm	7	8 hrs	8-12noon 2-6pm
3	10hrs	6-9am 5-12midnight	8	8 hrs	8-12noon 3-7pm
4	8 hrs	9am - 5pm (solar)	9	8 hrs	10pm - 6am (offpeak)
5	6 hrs	6-8am 5-9pm	times may change – see unit for choices		


Setting the Time – the SET TIME Sub-MENU:

To set the time of day simply go to the SET TIME Sub-MENU and press the ENT(ER)-pad. Line2 of the LCD will now read “SET TIME HOURS” – simply use the UP/DOWN-pads to adjust the Hours Value on the LCD. When complete a ENT-pad press will then move to show “SET TIME MINUTES” on Line2 and the UP/DOWN-pads can be used to adjust the Minutes Value. When complete press the ENT-pad to return to normal operation. The diagram below shows how to set the time:

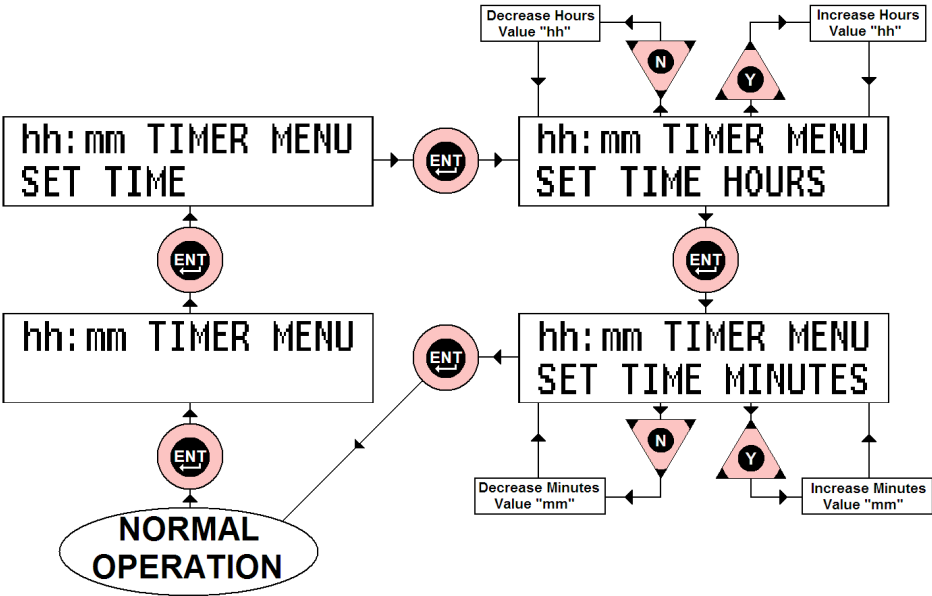

Enabling Filter Cycles – the FILTER CYCLES Sub-MENU:


Using the ENT(ER)-pad and the UP/DOWN-pads go the FILTER CYCLES Sub-MENU (Line2 of LCD) and press ENT-pad – see “Accessing The Timer Menu” page 19. It will have an associated number – this is the number of enabled Filter Cycles (FCs). Using the UP/DOWN-pads this number can be easily changed. To make the change take effect the ENT-pad must be pressed – normal operation is then resumed. The effect of Filter Cycles is described on page 13.

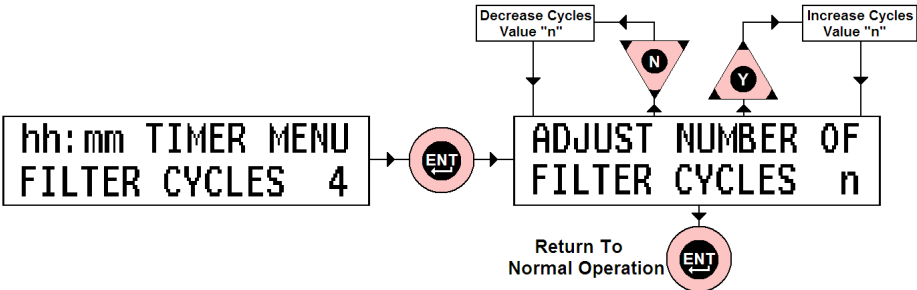

Changing the Filter Cycle ON & OFF Times – ADJUST CYCLES Sub-MENU:

The ADJUST CYCLES Sub-MENU allows the user to change the ON & OFF times of the Filter Cycles (FCs) that are enabled. For example if there are 2 FCs enabled the user can adjust FC1 and FC2. To adjust all FC ON & OFF times all FCs must be enabled – see “Enabling Filter Cycles” page 20.

Using the ENT-pad and the UP/DOWN-pads go the ADJUST CYCLES Sub-MENU (Line2 of LCD) – see “Accessing The Timer Menu” page 19. When the ENT-pad is pressed Line1 of the LCD will now read the ON time of the Filter Cycle number shown at the end of Line2. This is adjusted with the UP/DOWN-pads. Once the desired time is reached the ENT-pad is pressed to store the ON time and the OFF time is then displayed. The OFF time is adjusted in the same way as the ON time. After ON/OFF times for the first enabled FC are adjusted the next enabled FC ON time is shown on the LCD. This process continues until all FCs are adjusted.

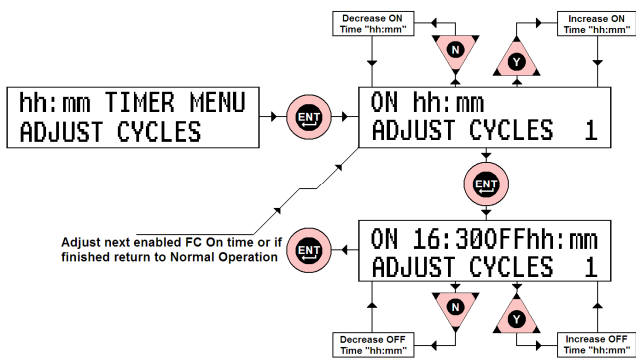

Note: Only enabled Filter Cycles are available for adjustment (starting with FC1).
ENT-pad must be pressed to store the changed times and move through the process.
If Times are to remain unchanged simply press ENT-pad and the original time is kept.

Filter Cycle Planner:

	Midnight 00:00	3am 03:00	6am 06:00	9am 09:00	Midday 12:00	3pm 15:00	6pm 18:00	9pm 21:00
Default Filter Cycle ON/OFF Periods			FC1	FC1			FC2	FC2
							FC3	FC3
							FC4	FC4
Plan your Cycles here								

The TEMPERATURE MENU


The TEMPERATURE MENU is used to adjust a temperature compensation value that helps to maintain the accuracy of the STATUS warnings when the water temperature gets lower over the colder months.

Accessing the TEMPERATURE MENU:

The TEMPERATURE MENU is accessed in the same way that all other MENUs are accessed – an ENT-pad press will shift to the MENU SYSTEM (TIMER MENU), then UP/DOWN-pad presses will shift to the TEMPERATURE MENU – press ENT-pad to enter.

Setting the Water Temperature

The display will now read “ADJUST TEMP=26°C”. The UP/DOWN-pads will allow adjustment from 12°C to 26°C in 2°C steps. This value is used to provide system compensation for colder water – when water temperature reduces (eg in winter) the conductivity will decrease. Without compensation the unit will warn of Low Conductivity before it should.

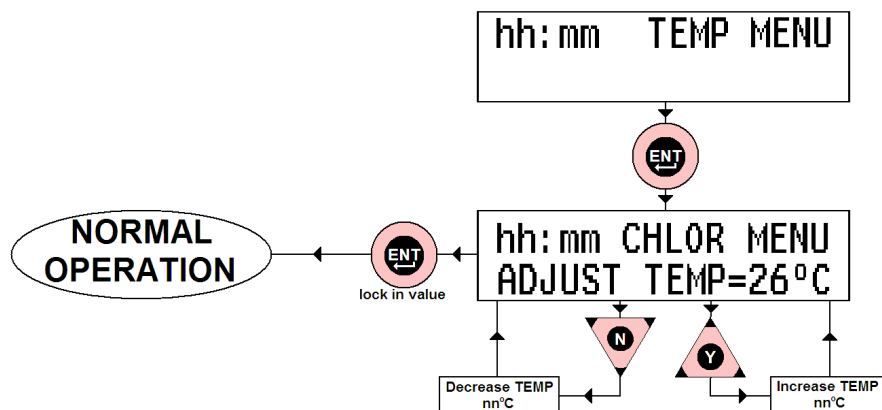

The LIGHT MENU

The LIGHT MENU is used to select and adjust the automatic light control. The light power supply can be turned ON/OFF like a Filter Cycle, as well as being manually controlled. If the light automation is selected the light power supply will be controlled by the ON and OFF times. If the light is turned ON manually it will still be turned off at the OFF time. If the light automation is not selected the light can only be controlled manually.

Manual Light Operation


During normal operation the light can be turned ON manually by pressing the UP-pad for approximately 4 seconds. It can be turned OFF by pressing the DOWN-pad for 4 seconds. Note that for LED Lights requiring a power pulse to change effects you will be prompted after turning the Light ON manually. An UP-press will pulse the light.

Accessing the LIGHT MENU:

The LIGHT MENU is accessed in the same way that all other MENUs are accessed – an ENT-pad press will shift to the MENU SYSTEM (TIMER MENU), then UP/DOWN-pad presses will shift to the LIGHT MENU. Once the LCD Line1 reads “hh:mm LIGHT MENU” – press ENT-pad to enter.

Line2 will now read “AUTO ? Y/N”. To disable automatic light operation press the DOWN-pad. Line2 will read “Auto OFF” for short period then the system will return to normal operation and the light will only respond to Manual ON/OFF.

To enable automatic light operation press the UP-pad. Line2 will read “Auto ON” for short period then the system will return to normal operation and the light will only respond to Manual ON/OFF. A ENT-pad press will lock in the new ON-time and the LCD will read “ON hh:mm”. The OFF-time is adjusted by using the UP/DOWN-pads. A ENT-pad press will lock in the new OFF-time and the system will revert to normal operation.

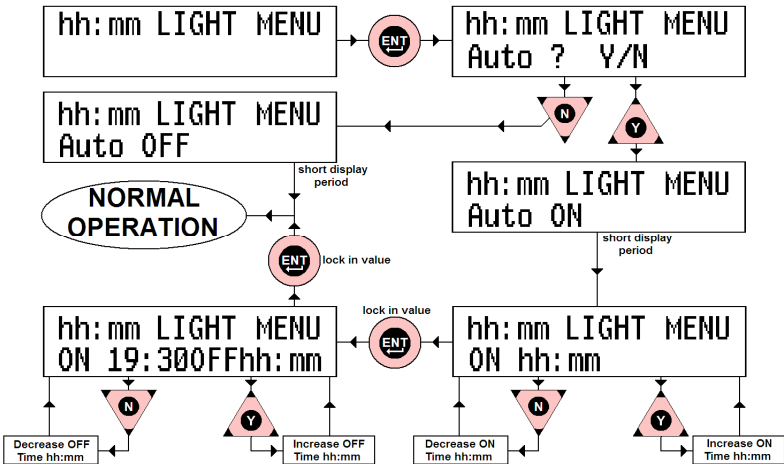

The +ACID MENU - Optional (The Acid Dosing Menu)

The +ACID MENU is used to select and adjust the Acid Dosing System (ADS). The ADS is a timed acid dosing system using either a vacuum valve or peristaltic pump. As chlorine is produced the pool pH will go up slowly. This can be offset by small doses of acid added to the pool.

An algorithm estimates the amount of acid that is needed per dose. ***It is vital that the pool pH is checked regularly – THIS SYSTEM MUST BE ADJUSTED TO SUIT YOUR POOL. See the section on pH & Total Alkalinity on page 27 and POOL BALANCE on page 29.*** Once the ADS is adjusted maintenance should be minimal.


Accessing the +ACID MENU:

The +ACID MENU is accessed in the same way that all other MENUs are accessed – an ENT-pad press will shift to the MENU SYSTEM (TIMER MENU), then UP/DOWN-pad presses will shift to the +ACID MENU. Once the LCD Line1 reads “hh:mm +ACID MENU” – press ENT-pad to enter. After entering the +ACID MENU Line1 of the LCD will read “hh:mm DOSE ONLY”.

The +ACID MENU is relatively long compared to the other MENUs but is simple to use. If you do not want to change any values simply pressing the ENT-pad (or DOWN-pad for NO) will move past each section. If you are worried about making a change before checking with this manual simply do not touch anything and normal operation will resume after a few seconds.

Acid Dosing – Turning it OFF (and back ON):

After entering the +ACID MENU Line2 of the LCD will read: “DOSER ON ? Y/N”. Pressing the DOWN-pad will exit the MENU after turning the ADS OFF (ie no acid will be dosed) – Line2 will read “DOSER OFF” before normal operation resumes. Pressing the UP-pad will result in Line2 reading “DOSER ON” for a short period before the ADS moves on to the next Sub-MENU – ADJUST Man DOSE ? see next Sub-MENU.

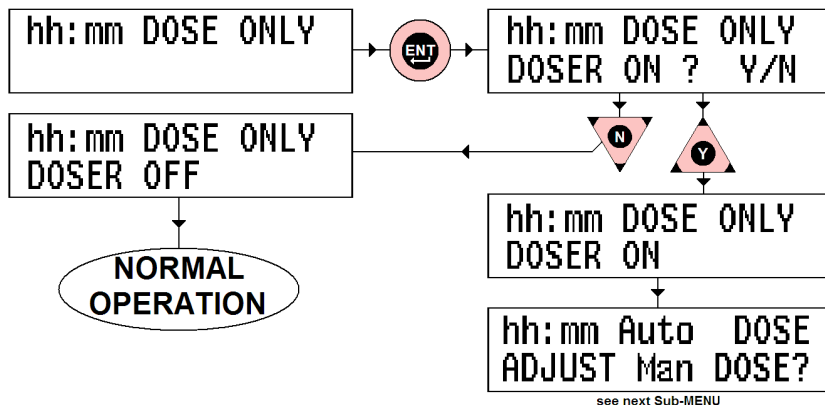

Adding Acid Manually – the ADJUST Man DOSE Sub-MENU:

This Sub-MENU adjusts the amount of acid added to the pool as an immediate dose. The adjustment is from 0mL (OFF) to 750mL in 15mL increments.


This function is useful for priming acid lines after an acid drum change, and for adding a large dose of acid after adding buffer (see POOL BALANCE page 29).

To enter the ADJUST Man DOSE Sub-MENU simply press the UP-pad to indicate YES. Pressing the DOWN-pad (NO) will move the system to the next Sub-MENU: ADJUST Man DOSE.

Once into the ADJUST Man DOSE Sub-MENU the LCD display will read –

Line1: “hh:mm Man DOSE”; Line2: xxx mL”

Use the UP/DOWN-pads to adjust the xxx value and press ENT-pad to lock in value and move to back to normal operation. Dosing should begin in 5 seconds.

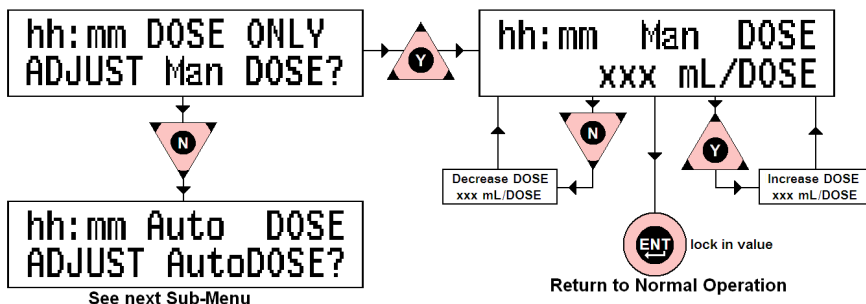

Automatically Dose Acid – the ADJUST AutoDOSE Sub-MENU:


This Sub-MENU adjusts the amount of acid added to the pool each time the system doses. The adjustment is from 15mL/dose to 300mL/dose in 15mL/dose increments.

To enter the ADJUST AutoDOSE Sub-MENU simply press the UP-pad to indicate YES. Pressing the DOWN-pad (NO) will move the system to the next Sub-MENU: ADJUST Man DOSE.

Once into the ADJUST AutoDOSE Sub-MENU the LCD display will read –

Line1: “hh:mm Auto DOSE” Line2: “xxx mL/DOSE”

Use the UP/DOWN-pads to adjust the xxx value and press ENT-pad to lock in value and move to next Sub-MENU: ADJUST Man DOSE.

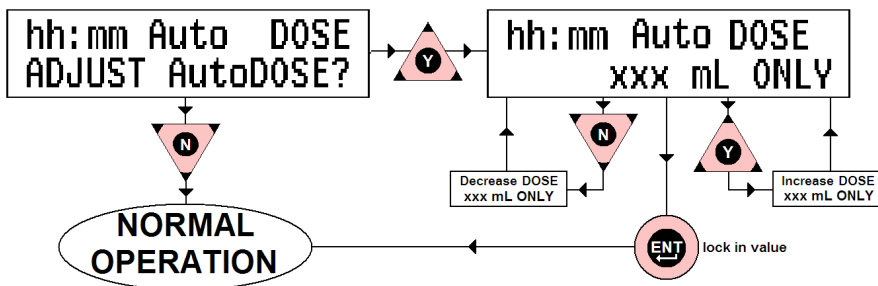

Pool Chemistry for the PC Premium

Salt

Operating the PC Premium Cell in pool water with less than the minimum recommended salt level will increase the wear on the Cell. Salt is the essential chemical needed for PC Premium operation. It uses the salt to manufacture chlorine. Not enough salt means not enough chlorine – and not enough salt also means faster Cell wear. *Keep salt below 7500ppm to avoid possible shutdown.*

The minimum salinity for the PC Premium is 3000ppm. Salinities below these values will result in early Cell failure.

Salt is not consumed in the PC Premium process. A simplistic view of the PC Premium process is that energy is added to split the salt to make free chlorine and the chlorine is then used to destroy bacteria, fungi, viruses and other unwanted things in the pool water. When the free chlorine has done its job it goes to being salt again – ready to be recycled again and again. Salt leaves the pool through backwashing, splashing and on bathers as they leave (and leaks if you have them).

The PC Premium has a Low Conductivity Warning to advise when salt may be needed. Conductivity falls with salinity and temperature. If the Lo COND warning is ON check the water temperature and adjust the temperature compensation (page 22) before checking the salt level. This is important over the winter months.

Operating the PC Premium without enough salt will void the warranty – it is the owner's responsibility to ensure that correct salt levels are maintained.

Stabiliser (cyanuric acid)

All outdoor pools must have a stabiliser level of 30ppm – 50ppm.

Stabiliser helps to retain chlorine in the pool by slowing the destructive effect of sunlight. Without stabiliser it will be difficult or impossible to keep a chlorine residual in the pool – the PC Premium may need to be run for 3 – 4 times as long.

Stabiliser is not used up in any process – it leaves the pool in the same way that salt does. It should only need topping up when the salt does.

High levels of stabiliser will cause problems in a salt pool – never allow stabiliser to rise beyond 80ppm. Stabiliser can enter the pool in chemically added chlorine – both dichlor and trichlor (chlorines) are stabilised and will leave a residual.

Adding Stabiliser – to add 10ppm: add 100g for every 10,000 litres (10m³). Stabiliser is slow to dissolve and should be added by placing in an old stocking and hanging over a pool return. If this can not be done the stabiliser can be added slowly to the skimmer box after the filter has been backwashed/cleaned. **DO NOT BACKWASH THE FILTER FOR AT LEAST 7 TO 10 DAYS WHILE THE STABILISER DISSOLVES OTHERWISE IT WILL BE LOST TO THE BACKWASH PIT !**

ALWAYS GET THE LEVEL CHECKED BEFORE ADDING MORE !

pH & Total Alkalinity (TA)

Incorrect pH levels can damage a pool – see POOL BALANCE on page 29.

Read instructions on chemical containers – be safe around chemicals !

pH

Correct pH must be maintained to allow free chlorine to be effective. If you allow the pH to rise above 8 you will need many times the usual amount of chlorine for sanitation. Correct pH will also help to prevent problems such as black spot, cloudy water and staining. pH is adjusted down with hydrochloric acid, liquid sulphuric acid or dry acid (sodium bisulphite).

NOTE: use of sulphuric acid will increase sulphate levels in pool water. In areas where barium is present in the water sulphate can lead to the formation of an insoluble coating (of barium sulphate) over the Cell which will stop the Cell operating.

pH is adjusted up with soda ash (sodium carbonate) and buffer (sodium bicarbonate).

Buffer also increases TA.

Total Alkalinity (TA)

TA is related to pH in that it stops the pH from varying quickly with small additions of acidic or alkaline chemicals.

When the TA is low it is almost impossible to control the pH. This can lead to serious variations in the pH. To raise the TA buffer (sodium bicarbonate) is added. This must be done slowly as buffer will also cause the pH to rise. As an approximate rule every increase of 20ppm of TA will also cause a 0.1 rise in pH. Once buffer is added it should be left to mix in the pool for a few hours before reducing the pH. Test kits are available to measure both TA and the acid demand for this operation – or you can go to your local poolshop for advice.

To lower TA – add acid.

Chlorine

Low chlorine levels can mean that the pool is unsanitary. High chlorine levels can lead to bather irritation. Follow Health Department guidelines.

PC Premium produces chlorine at a rate determined by the Cell size:

Cell Size	PC Premium Model	Output in Equivalent Chlorine					
		Each hour of operation			Over 8 hour period		
		Gas (100%) g/Hr	Granular (65%) g/Hr	Liquid (12%) mL/Hr	Gas (100%) g	Granular (65%) g	Liquid (12%) litres
	20	20	31	167	160	246	1.33
	30	30	50	250	240	369	2.00

Running Times:

The amount of chlorine being added to the pool each day is determined by the Cell size and the number of hours that the PC Premium is operated. Chlorine is added for sanitation – it does not clean the water. The filter keeps the water looking good. Most pollutants (dust, sand, vehicle pollution, etc) enter a pool from the atmosphere – and it does this 24 hours per day. The filter must operate for a reasonable number of hours per day to keep the water looking good. As sunlight destroys chlorine (see section about Stabiliser on page 26) it is recommended that the PC Premium be run mostly in the evening. The PC Premium comes preset to run from 6am to 8am in the morning and from 5pm to 11pm in the evening (17:00 to 23:00).

Always run the filter when using the pool.

To keep the pool looking good over the swimming season it is recommended that your filter and PC Premium be operated for at least 8 hours per day. In very hot weather and/or with large bather loads the pool may need to run for 10 or more hours per day, depending on the Cell size. In these cases extra chlorine can also be added. If there are adverse local conditions – such as windborne dust and debris or heavy traffic pollution- the chlorine demand will be higher than normal. You will likely need to operate the filter for longer periods.

Controlling the Chlorine Residual:

There are two ways of controlling the amount of chlorine entering the pool – by altering the running times and by reducing the PC Premium Output. If the pool chlorine residual tests high you can reduce the operating time and/or decrease the Output. If the chlorine residual tests low and the output is already at maximum you will need to increase the operating time and/or add supplementary chlorine.

PC Premium Output Control:

The LCD display usually shows the amount of chlorine being produced by the Cell as a percentage of its maximum. This is not the same as the PC Premium Output. The Output Control turns the Cell ON/OFF over a short period of time. The Output setting determines how long the ON time is – for example if the Output setting is 60% the Cell will be ON for 60% of the period and OFF for 40% of the period. This is why the Cell will turn ON/OFF if the PC Premium Output is below 100%.

Superchlorination:

When bathers enter a pool there is a reaction between nitrogen/ammonia compounds from the bathers and the chlorine in the pool. These reactions form chloramines (also called combined chlorine) which are responsible for the “chlorine” odour and for some minor irritations. These compounds can be broken down by adding free chlorine to a level above 5ppm. The addition of a shock dose to chlorine to do this is called superchlorination.

With the PC Premium process levels of chlorine at the Cell anodes far exceed 5ppm and so a lot of chloramines will be broken down as water passes the Cell. If the combined chlorine level becomes high simply add a shock dose of chlorine or run the PC Premium for a long period overnight (see page 15/16 for specific Timer settings for this).

Pool Balance

The water in the pool needs to be maintained for the safety of swimmers and the reliability of the equipment and the pool itself. Concrete/plaster pools are particularly susceptible to pool balance problems. The balance in this case is the need of the water to take on or give up calcium. The Langelier Index is used to determine water balance. If the water does not have enough calcium it is said to be corrosive (or aggressive) and if it has too much it is said to be scaling. Corrosive water will look to obtain calcium from any source – in the case of a concrete/plaster pool it will be from the pool walls. A pool with continuously corrosive water will eventually have its walls begin to turn to dust/sand as the calcium that holds the wall material together is leached away. Conversely a pool with scaling water will tend to precipitate calcium onto its surfaces – the walls, the sand in the filter and the insides of the plumbing.

- 1 **SALT** – there must be at least 4000ppm of salt in the pool. This ensures that the PC Premium will operate correctly. If there is not enough salt in the pool the Cell will wear out faster – this is why the PC Premium has a Low Conductivity warning. Conductivity falls with salinity.
- 2 **CHLORINE** – check with local health regulations for minimum and maximum values. Generally 3ppm (stabilised, 1.5ppm unstabilised) will maintain a healthy pool.
- 3 **STABILISER** – it is vital that stabiliser (also known as cyanurate and cyanuric acid) be added and maintained at 30ppm to 50ppm. Never exceed 80ppm. **DO NOT ADD TO INDOOR POOLS AS THERE IS NO DIRECT SUNLIGHT.** *If there is NO stabiliser in the pool add 50grams for every 1000 litres of pool water.*
- 4 **pH** – for chlorine to be effective the pH must be within a certain range. This is usually between 6.8 (fibreglass/liner pools) or 7.2 (concrete/plaster) and 7.8. Check with the pool builder or your poolshop. As the pH falls the water balance tends toward becoming corrosive. A higher pH is usually better to avoid corrosive water. Raise pH with soda ash (sodium carbonate) and buffer (sodium bicarbonate, also raises TA). Lower pH with acid.
- 5 **TOTAL ALKALINITY** – also known as carbonate hardness or TA for short. This is necessary to help control pH. As TA falls water becomes more corrosive. Recommended level is between 80 and 120ppm. See below for the relationship between TA and pH. Increase TA with buffer (sodium bicarbonate).
- 6 **CALCIUM HARDNESS** – this can be controversial. The Australian Standard AS3633 states that calcium hardness can be 80 to 500ppm. However salt Cells become scaled due to calcium in the water. For the purpose of keeping maintenance to a minimum it is recommended that calcium levels be left as low as possible (ie around 80ppm). See below.

The above parameters can be mixed and matched to achieve balanced water. The amount of calcium dissolved in the water is determined mostly by the pH. At high pH calcium will simply precipitate out of the water – this can sometimes be seen as cloudy water after adding a large amount of buffer. To keep the pH of a pool at the lower end of the range requires a constant addition of acid over time. The addition of this acid reduces the TA and so buffer must also be added to stop the pH from becoming uncontrollable. This is a bit like a fast merry-go-round. To reduce the speed (and save money and time) keep the pH at the higher end of the range to reduce the need for acid and buffer, and also reduce the need for calcium to finally balance the water. This means that calcium may not be needed and

so Cell maintenance can be minimised. The following information allows the calculation of the Langelier Saturation Index for the pool.

The Langelier (Calcium) Saturation Index (LSI):

The calculation of the Index value is simplified by using a number of pre-calculated factors that can be added/subtracted to give a value. It should be noted that poolshop water reports generally use the LSI in their water balance. Some systems do not include the TDS and this is necessary for salt water pools. A negative LSI indicates corrosive water and a positive LSI indicates scaling water. It is better for pool water to be slightly scaling than corrosive.

LSI = pH + TAF + CF – TDSF – TF – 9.3 where pH is the pool water pH, TAF is the Total Alkalinity Factor, CF is the Calcium Factor, TDSF is the *TDS Factor, TF is the Temperature Factor *Total Dissolved Solids includes salt level

Total Alkalinity Factor		Calcium Hardness Factor		TDS Factor		Temperature Factor	
TA (ppm)	TAF	Hardness (ppm)	CF	TDS (ppm)	TDSF	Temp (°C)	TF
60	1.78	40	1.20	500	0.17	12	2.34
70	1.84	50	1.30	1000	0.20	14	2.30
80	1.9	60	1.38	2000	0.23	16	2.26
90	1.95	80	1.50	2500	0.24	18	2.22
100	2.00	100	1.60	3000	0.25	20	2.18
110	2.04	120	1.68	3500	0.25	22	2.15
120	2.08	140	1.75	4000	0.26	24	2.11
130	2.11	160	1.80	4500	0.26	26	2.07
140	2.15	180	1.86	5000	0.27	28	2.03
150	2.18	200	1.90	5500	0.27	30	1.99
160	2.20	250	2.00	6000	0.28	32	1.96
170	2.23	300	2.08	6500	0.28	34	1.92
180	2.26	400	2.20	7000	0.28	36	1.88
190	2.28	500	2.30	7500	0.29	38	1.84
200	2.30	600	2.38	8000	0.29	40	1.81

In general if the LSI in the range of $-0.5 < \text{LSI} < 0.5$ then the water can be considered balanced.

An example: a salt pool has a TDS of 4500ppm, is at a temperature of 26°C, has a TA of 100ppm and a calcium hardness of 80ppm. What should its minimum pH be ?

The minimum pH will be when the LSI is at its minimum ie -0.5 :

$$-0.5 = \text{pH} + 2 + 1.5 - 0.26 - 2.07 - 9.3 \quad \text{which simplifies to:}$$

$$-0.5 = \text{pH} - 8.13 \quad (\text{ie pH} = 7.6)$$

The minimum pH for balance is 7.6. If perfectly balanced water were required the LSI must be 0. In this case the pH would need to be 8.09, which is too high for a pool as the chlorine would not be very effective. If an LSI of 0 were required a change would need to be made to the pool balance. If we take the example above and want the pH to be 7.8 (for LSI = 0) the simplest change we can make is to increase the TA:

$$0 = 7.8 + \text{TAF} + 1.5 - 0.26 - 2.07 - 9.3 \quad \text{which simplifies to:}$$

$$0 = \text{TAF} - 2.33 \quad (\text{ie TA} = 200)$$

In the above case the TA would need to be very high and so some calcium may need to be added.

If we make the TA 130ppm and add 40ppm to the calcium hardness the pool will be balanced.

Some Pool Additive Information:

Algaecides

These additives either kill algae or remove the conditions required for growth. Copper based algaecides – these pose minimal risk to the Cell of your PC Premium. However copper (and a lot of other metals) can be precipitated from pool water as the pH rises. This means that if copper is added and your pool pH rises well above the recommended range there may be staining to the pool surfaces. Should not affect the Cell. Quaternary ammonium compounds – usually benzalkonium chloride. This compound is generally an algae preventive treatment. It is a surfactant (similar to a detergent) and can cause foaming in pools and spas. Care should be exercised when using this compound as it can turn cloudy in water when exposed to high chlorine residuals. If a pool has a slower water flow it may turn cloudy in the Cell Housing due to the high level of chlorine present there. Should not affect the Cell.

Phosphate Removers – usually lanthanum salts. This compound will precipitate all phosphate from the pool water and so there will be no essential nutrient for the algae to grow. It is recommended that the Cell be turned off for several days while the pool is being treated.

Citric Acid (black spot remover) – using this additive will stop a chlorine residual from being measured for up to 4 – 6 weeks. Should not affect the Cell.

Polyhexanide Hydrochloride – this is the same as polyhexamethylene biguanide (previously sold under the name “Baquacil”). This is not compatible with chlorine. It is used in non-chlorine sanitiser systems (with use of oxygen based shock compounds).

Shock Treatments

These compounds are based around chlorine or oxygen (usually peroxides). They act to increase the chlorine residual or impart peroxide to the water. A common oxygen-based additive is potassium monopersulphate (monopersulphate for short). In the presence of salt this will activate chloride to free chlorine. Should not affect the Cell.

Pool Flock (coagulants)

These compounds are used to bind small particles together so that they can be filtered from the pool water. Common ones are alum (aluminium sulphate) and polymer-based surfactants. Should not affect the Cell.

Anti-Stain & Anti-Scale Compounds

Anti-stain compounds are used to remove mineral/metals from the water before they can cause staining. They are usually chelating agents, and usually EDTA: ethylenediaminetetraacetic acid. These agents bind certain types of metal ions.

Anti-scale compounds are designed to work on calcium – usually to stop it forming a hard scale. They will not stop scale forming on a Cell, but may modify it.

Maintenance

Like all equipment the PC Premium will look better and last longer if it is maintained and operated as advised in these instructions. Look after it and it will look after you !

The PC Premium Power Supply

The Power Supply has been design for operation in full sun and weather. However, it will benefit from being under cover. There is little maintenance required however – some Do's and Don'ts –

Don't:

- Install it in a small sealed enclosure as it will overheat
- Install it in a very hot unventilated shed – overheating again
- Allow insects to nest in the unit – for obvious reasons
- Install chemical drums under or close to the unit – for obvious reasons
- Forget about the unit once installed – it should be checked regularly to ensure that it is working for you (and insects have not taken up residence)

Do:

- Install it as per the instructions
- Check it regularly
- Make sure the pool balance is checked regularly

The PC Premium Cell

The Cell is manufactured from extremely expensive materials – if it fails early due to lack of maintenance then the pool operating cost will not be as economical as it could have been. The Cell has a limited life as its anodes (active electrodes) will wear slowly as it produces chlorine.

The PC Premium Cell uses an electronic means (polarity reversal) to remove scale from its cathodes. This system works very well in most pools except those with extreme hardness and/or mineral levels. Even in the extreme cases where scaling does occur the rate at which it occurs is far slower than for normal Cells.

Scale is a combination of calcium and other mineral salts (usually carbonates). The rate of scale build-up is determined by the amount of use and the pH/calcium hardness/TA and temperature of the pool water. Generally concrete/plaster pools will scale much faster than plastic pools as they tend to have much higher calcium levels in the water due to the leaching of minerals from the pool surface.

Bore Water – generally contains far more minerals than scheme water. If bore water is used it is likely that faster Cell scaling will be seen.

Cell Cleaning:

The PC Premium Cell is self-cleaning, however, some conditions such as very hard water can cause the cell to become scaled over time. If scale has become thick enough to nearly bridge between the Cell electrodes it is time to clean the Cell. Cells can be cleaned in a solution of hydrochloric acid – ***read the warnings and instructions on the acid container!***

To make the acid solution add 1 part hydrochloric acid to 4 parts water in a suitable container. This solution can be used a number of times so a re-useable container with a lid can be used – make sure it is stored safely. Alternatively a commercial Cell Cleaning solution can be used – the choice is yours. The hydrochloric acid solution will not damage the Cell – the Cell materials are used in the industrial process for manufacturing chlorine and hydrochloric acid.

The PC Premium unit should be turned off so that any AutoMode functions can not turn it back on until after the Cell is clean and back in its Housing – see page 16, Man OFF → No AutoON. Remove the Cell from its Housing and immerse in the acid solution. Note that it may foam up and overflow the sides of the container – take care !

The Cell should not take longer than a few minutes to clean – if it does it may require more frequent cleaning. It may also be possible to remove some or most of the scale with a jet of water. NEVER USE A STIFF BRUSH OR HARD IMPLEMENT TO CLEAN THE CELL AS THE COATING MAY BE DAMAGED.

What to Avoid In The Pool

There are things to avoid having in the pool.

- 1 Stabiliser >80ppm – the pool may go green even with plenty of chlorine
- 2 Iron – this usually comes from bore water. If the pH rises you may end up with black/brown pool surfaces.
- 3 Manganese – once again possibly from bore water. This mineral will destroy the Cell in a few months. It is not a common problem.
- 4 Too much Copper – a little does a good job of killing algae, too much can stain pool surfaces, there are test kits available.
- 5 Barium & Sulphate – if there is a tiny amount barium in the fill water and relatively high amount of sulphate going into the pool then there may be a barium sulphate covering forming over the Cell. Limit sulphate additions.
- 6 Citric acid – if you need to add it be aware that the chlorine residual will not be measureable for a number of weeks.
- 7 Do not get any fertiliser into the pool – this will create an algae bloom that will be difficult to get rid of.
- 8 Do not let the chlorine fall to 0 for any length of time – even if the pool does not go green it may allow the filter to become “biological”. If the filter does become colonised bleach it with liquid chlorine by adding 2 litres at the skimmer and then turning the pump off for about an hour.

Trouble-shooting (in paradise)

Before requesting service please check below – most problems can be rectified by running through the checklist. If the unit is not running at all **check the fuse** in the bottom of the unit.

Low or No Chlorine Residual Due to PC Premium:

- 1 Is the unit turned on and operating the filter pump ?
- 2 Are the operating hours sufficient (see page 28) ?
- 3 Is the Output set to 100% ?
- 4 When running is the Cell ON ? If so is it reading 100 ?
- 5 Is the Lo COND warning ON (see page 11) ?
- 6 Is the Cell scaled heavily ?

If the Cell is ON but not reading 100 then check the Temperature Compensation setting in the TEMPERATURE MENU page 22. Then check the pool salinity. If all else is OK the Cell may be failing.

Low or No Chlorine Residual Due to Pool Balance:

- 1 Check stabiliser level is 30ppm – 50ppm. Add if necessary and wait for it to dissolve.
- 2 Have you added any chemical additives recently ? – see pages 31 - 33
- 3 Check pool for phosphates and remove if necessary

Pool Has Gone Off (ie Green):

- 1 Test pool water for all required levels. If stabiliser is high (>80ppm) the pool water may need to be diluted. This can be a serious problem for a plastic pool (ie f/glass). Try to clear the pool before diluting.
- 2 If stabiliser is OK or low clear the pool by adding a large shock dose of chlorine and then a flocculant. The dead algae will settle to the bottom and will need to be vacuumed away – preferably to waste if possible. Top up pool and get all chemical levels correct.

UNIT SERIAL NUMBER:

**FOR MORE INFORMATION VISIT OUR
WEBSITE:**

www.reltech.com.au

OR E-MAIL US AT:

office@reltech.com.au

Jan2011